



somfy®


NL

EN

HANDLEIDING MANUAL

Somfy Zigbee motor

Een afstandsbediening toevoegen aan een geprogrammeerde motor (zonder dat er al een afstandsbediening is toegevoegd).

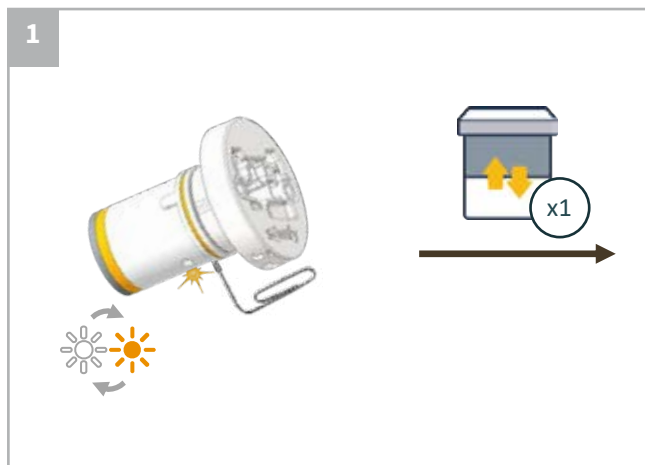


Druk 2s of sluit de oplader aan totdat de oranje LED knippert en de motor beweegt.




Druk kort op de prog-knop.

Instellen/aanpassen bovenste eindpositie.

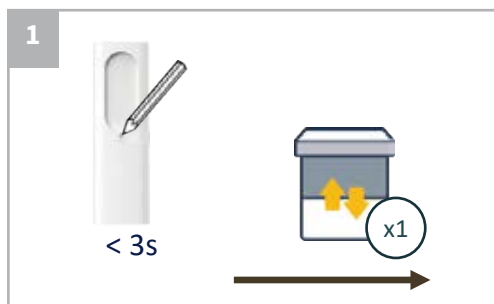

Druk op de prog-knop totdat de led rood wordt.

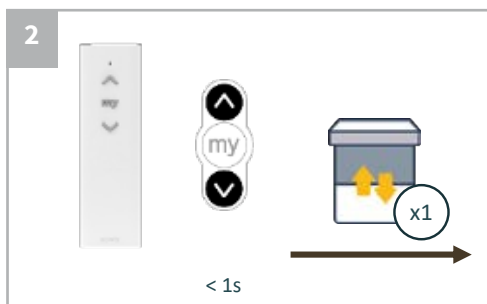

Druk kort op en neer.



Verplaats het rolgordijn naar de nieuwe gewenste positie.




Nieuwe positie instellen.




Bevestig en sluit af.


Instellen/aanpassen onderste eindpositie.

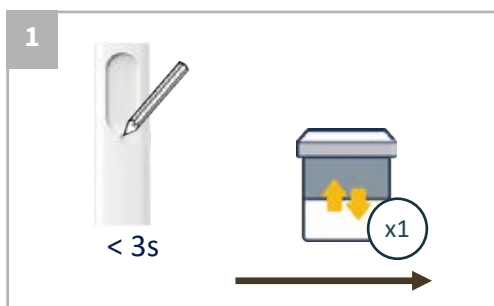


Druk op de prog-knop totdat de led rood wordt.

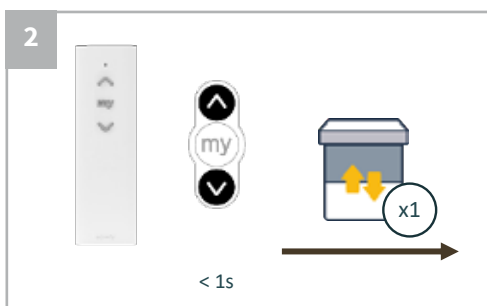

Druk kort op en neer.

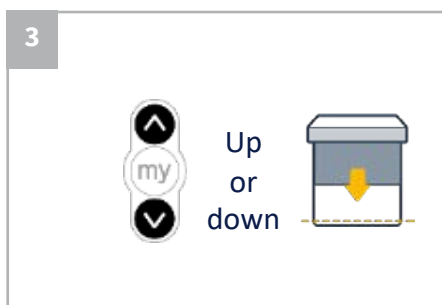

Verplaats het rolgordijn naar de nieuwe gewenste positie.

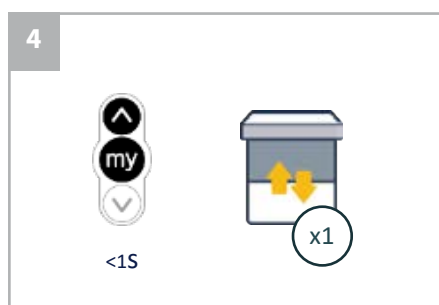


Nieuwe positie instellen.



Bevestig en sluit af.

Adding a remote control to a programmed motor (but with no remote added)

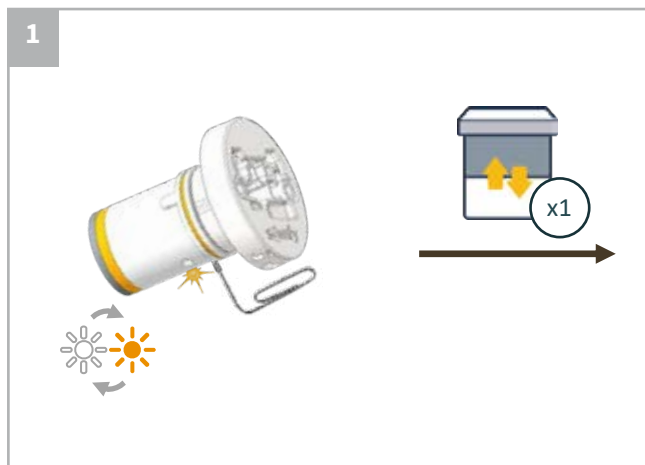


Press 2s or connect charger until orange LED blinks and motor jogs.



Press briefly prog button.

Adjust/set upper end position.

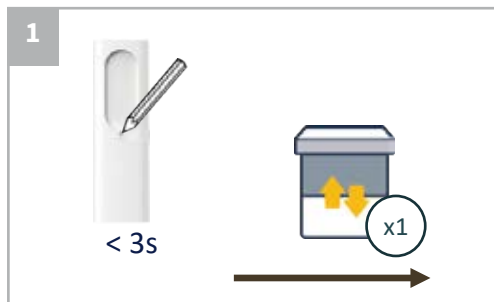


Press prog button until led goes red.



Press briefly up and down.



Move the blind to the new desired position.

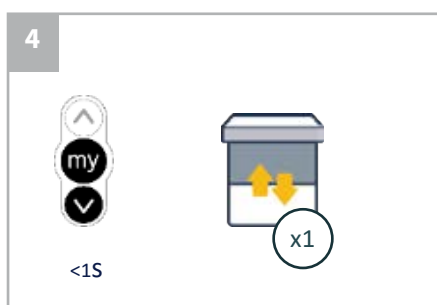


Set new position.




Confirm and exit.

Adjust/set bottom end position.

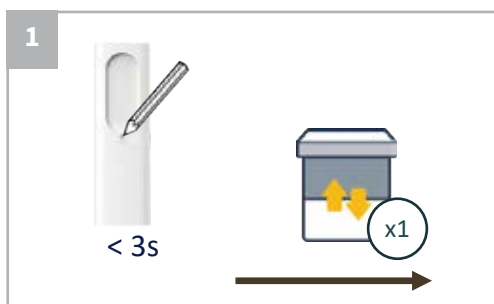


Press prog button until led goes red.

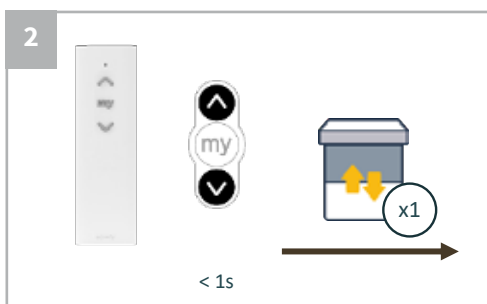

Press briefly up and down.



Move the blind to the new desired position.

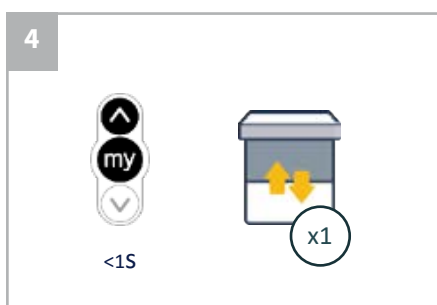

Set new position.



Confirm and exit.